

Installation Manual of DDC1002-8200

Parking List

DDC1002-8200 Module (1 piece) Certificate of Compliance (1 piece)

1.Product parameters

Model	DDC1002-8200		
OS	Linux	Interface	1x Ethernet、2x RS485 (Electromagnetic isolation)
CPU	1 Core 750 MHz	Ethernet Ports	1x 10M/100M NIC
RAM	64M	Dimensions/mm	110*95*42 (L×W×H)
Flash	32M	Weight/g	150
Power	≤6W	Material	Plastic Shell
Power Supply	AC/DC 12~24V	Installation	DIN-Rail
Digital Signal	8 DI(Support dry contact input), 2 DO(Support dry contact output, Up to 220V/5A)		

2.Model Description

Model	BI/DI	BO/DO	AI	AO
DDC1002-8200	8	2	0	0
Description	Support dry contact input	Support dry contact output		

3.Register Definition Explanation

BI/DI—Digital Input

BI/DI Register Address	BI/DI Port	Description
1	DI1	Digital Input port
2	DI2	Digital Input port
3	DI3	Digital Input port
4	DI4	Digital Input port
5	DI5	Digital Input port
6	DI6	Digital Input port

BI/DI Register Address	BI/DI Port	Description
7	DI7	Digital Input port
8	DI8	Digital Input port

BO/DO—Digital Output

BO/DO Register Address	BO/DO Port	Description
1	DO1	Digital output port
2	DO2	Digital output port

4.Wiring Instructions

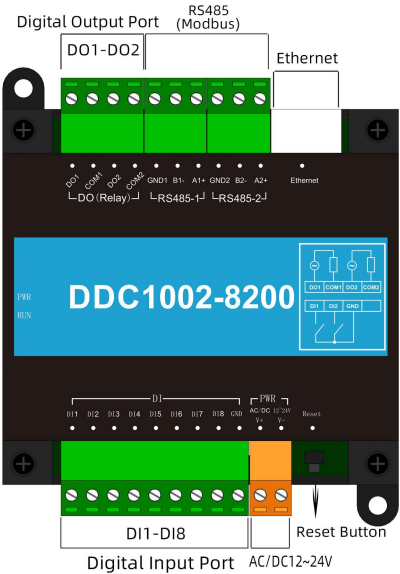


Figure1 Power and Communication Diagram

 


Figure 2 Digital Input

 


Figure 3 Digital Output



Figure 4 Power connection schematic diagram

5.Product dimensions

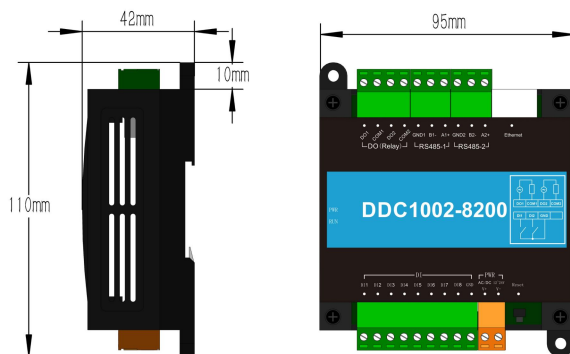


Figure 5 110mm*95mm*42mm(L×W×H) Weight :150g

6.Installation Method


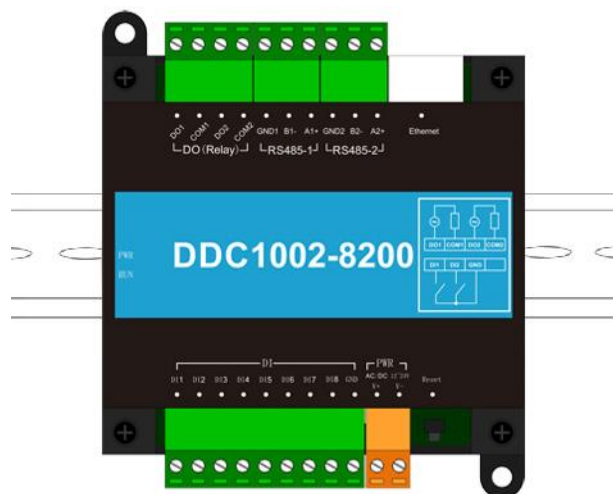


Figure 6 Rail-mounted

FAQ

Q①: How to use the DDC project included with X2View?

A①: Just open the "Samples" folder in the Demo project of the X2View software, upload it to the DDC, and you can directly modify and use it.

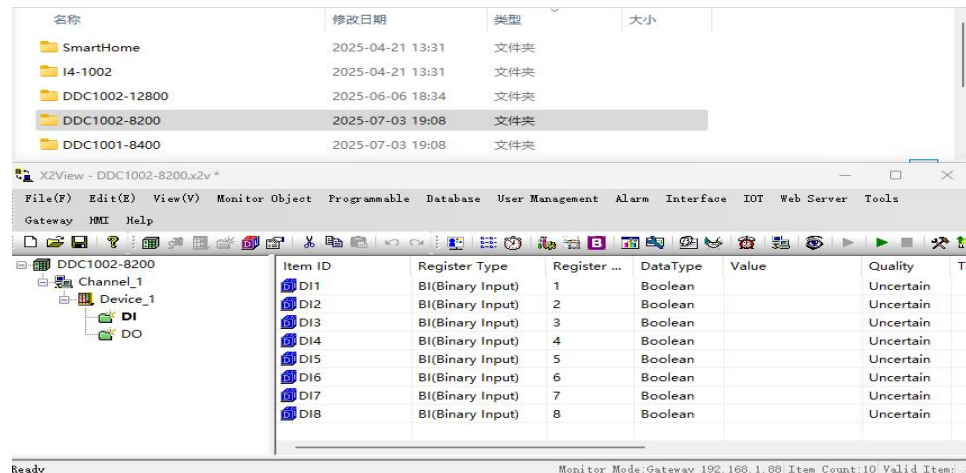

Q②: How to modify the IP address?

A②: The default IP address for the product at the factory is 192.168.1.88, subnet mask 255.255.255.0, and default gateway 192.168.1.1.

When the user uses it for the first time, they connect the computer and the product directly with a network cable, and then change the computer's IP address to the same network segment as the product (such as the one on the computer)

Change the IP address to 192.168.1.55), open the browser with the ping gateway IP address, enter the product IP address 192.168.1.88, log in to the product's web server, and set the IP address in the "Network Port Settings" column.

Q③: How to reset the IP?

A③: If user forgets the product's IP address, press and hold the FUN key until three beeps sound. The Ethernet port will temporarily revert to its default IP address. Connect via Ethernet and access <http://192.168.1.88/login.html> to view the original IP address. (This takes effect immediately but is invalidated after power-off.)

The free software: BACnetScan scanning software, OPC2WEB software, X2OPC_Free software, MBus scanning tools, Lumiscan green rice smart home scanning tools.

Shanghai Sunfull Automation Co., LTD. TEL: +86-021-58776098



Address: Room 603, Building 25, Lane 8633, Zhongchun Road, Qibao town, Minhang district, Shanghai.
Technical support Tel: +86 021-20252795
Website 1: www.bacnetchina.com
SalesTel: +86 13564889340 **Contacts:** Linda Chen
Website 2: www.opcmaster.com